



DIW-13P2

 
Maintenance Manual



DIW-13P2_Disassembly



1) 제품 확인




2) 5MM T렌치로 BOLT 분해




3) HAMMER CASING 분해



 4) CAGE HAMMER ASSY 분해



 
5) CENTER ROD 분해





6) HAMMER CAGE BUSHING 분해




DIW-13P2_Disassembly

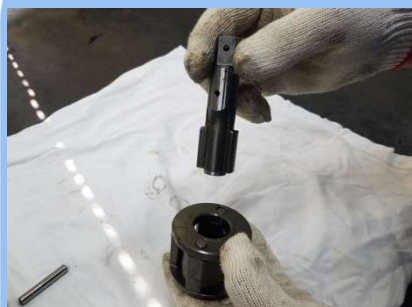

 7) ANVIL 분해

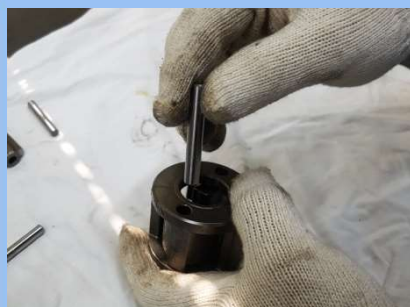



8) HAMMER PIN 분해

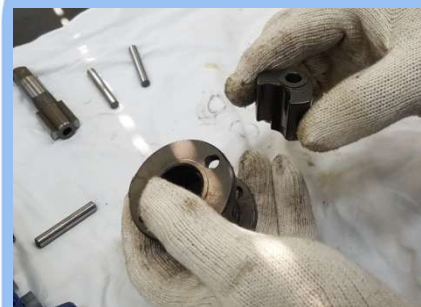


9) HAMMER 분해



 10) CAM HAMMER 분해

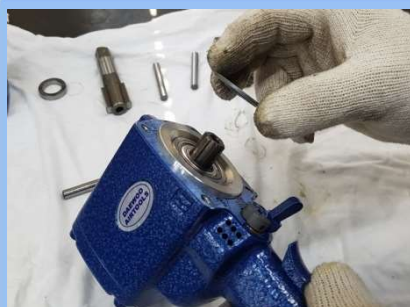

 11) SPACER 분해




12) HAMMER CASING 분해모습



DIW-13P2_Disassembly



 13) 4MM T렌치로 분해





14) CASING COVER 분해





15) ROTOR 분해



 16) ROTOR 분해

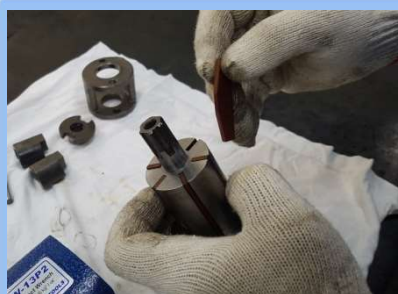

 17) BLADE 분해

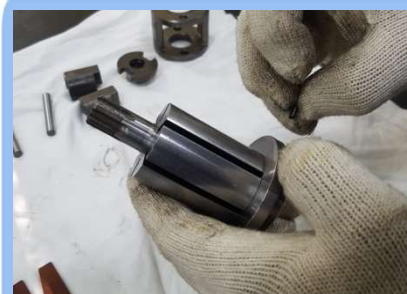


18) REAR PLATE와 SPRING PIN
분해



DIW-13P2_Disassembly



 19) ROTOR 와 REAR PLATE
분해




20) REAR PLATE BEARING
분해





21) 전체 모습



 22) ROTOR 와 REAR PLATE,
BEARING 조립



 23) ROTOR 간격 조정

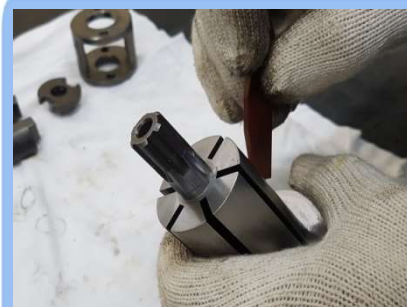


24) BLADE 조립



DIW-13P2_Disassembly



 25) REAR PLATE와 SPRING PIN
조립




26) FRONT BEARING 조립




27) ROTOR 조립



 28) CASING COVER 조립



 29) SPACER 조립





30) CENTER ROD 조립



DIW-13P2_Disassembly



 31) CAM HAMMER 조립

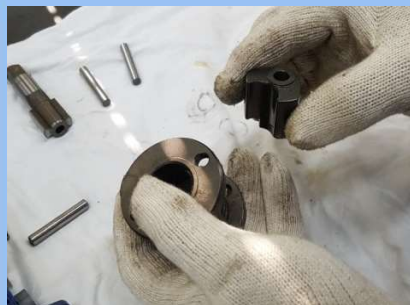


32) HAMMER 조립




33) HAMMER PIN 조립



 34) ANVIL 조립



 35) HAMMER CAGE BUSHING 조립




36) CAGE HAMMER ASSY 조립



DIW-13P2_Disassembly



 
37) HAMMER CASING 조립




38) 5MM T렌치로 BOLT 조립





39) TEST

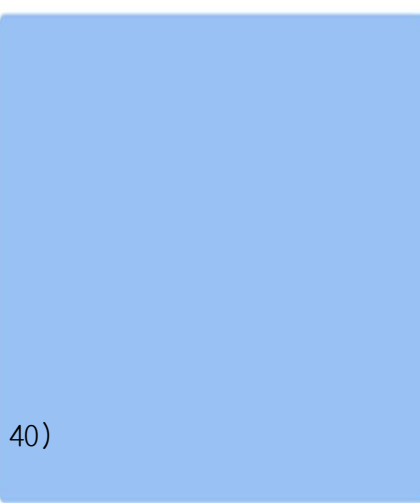

 40)



 41)

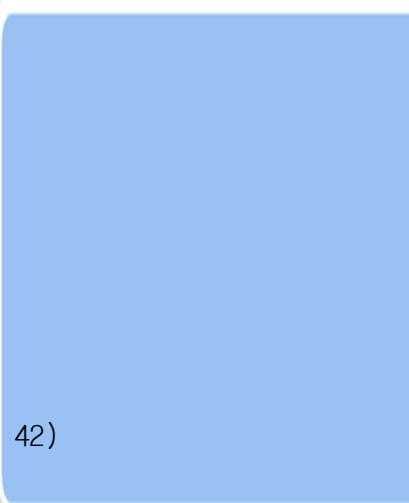

42)