



DIW-14N2

 
Maintenance Manual



DIW-14N2_Disassembly



1)제품 확인




2)BOLT 분해




3)CAGE HAMMER 분해 모습



 4)ROTOR ASSY 분해-1



 5)ROTOR ASSY 분해-2




6)SNAP RING 분해



DIW-14N2_Disassembly



 7) 전체 분해 모습




8) TRIGGER PIN 분해




9) PLUG 플림 확인



 10) BLADE 조립



 
11) CYLINDER 조립




12) ROTOR ASSY 고정



DIW-14N2_Disassembly

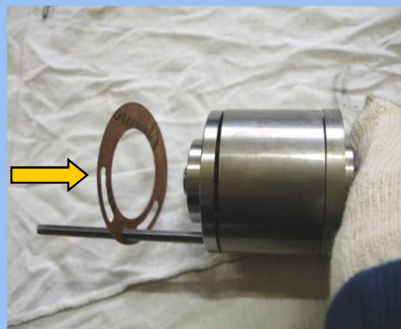

 13) REAR PLATE GASKET 조립




14) HOUSING에 ROTOR ASSY
조립-1





15) HOUSING에 ROTOR ASSY
조립-2



 16) CYLINDER DOWEL 조립



 17) SPACER 조립

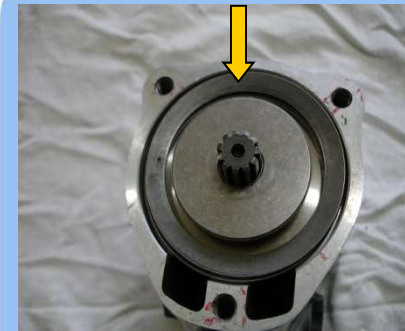


18) MOTOR CLAMP WASHER 조립



DIW-14N2_Disassembly



 19)GASKET 조립




20)HAMMER 조립




21)HAMMER PIN 조립



 22)FRAME HAMMER ASSY 조립



 23)ANVIL에 그리스 도포




24)ANVIL 조립



DIW-14N2_Disassembly



 25)



26) TEST