



DIW-19P

 
Maintenance Manual



DIW-19P_Disassembly



1) 제품 확인




2) 5MM T렌치로 BOLT 분해




3) HAMMER CASING 분해



 4) CAGE HAMMER ASSY 분해



 5) SPACE FRONT 분해




6) BUSHING ANVIL 분해



DIW-19P_Disassembly



 7) ANVIL 분해




8) HAMMER PIN 분해




9) HAMMER 분해



 10) CAM HAMMER 분해



 11) HAMMER CASING SPACER
분해




12) HAMMER CASING 분해모
습



DIW-19P_Disassembly



 13) 5MM T렌치로 BOLT 분해




14) CASING COVER 분해




15) PACKING 분해



 16) CYLINDER ASSY 분해



 17) FRONT PLATE 분해




18) CYLINDER 분해



DIW-19P_Disassembly



 19) BLADE 분해




20) ROTOR 와 REAR PLATE
분해




21) FRONT, REAR PLATE
BEARING 분해



 22) 전체 모습



 
23) ROTOR 와 REAR PLATE
조립




24) ROTOR 간극조정



DIW-19P_Disassembly

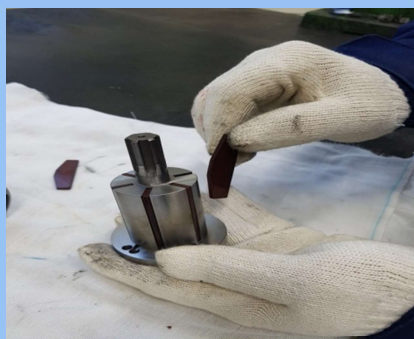

 25) BLADE 조립




26) CYLINDER 조립




27) FRONT PLATE 조립



 28) CYLINDER ASSY 조립



 29) PACKING 조립




30) CASING COVER 조립



DIW-19P_Disassembly



 31) 5MM T렌치로 BOLT 조립




32) HAMMER CASING SPACER
조립




33) CAM HAMMER 조립



 34) HAMMER 조립



 35) HAMMER PIN 조립




36) ANVIL GREASE 도포



DIW-19P_Disassembly



 37) ANVIL 조립




38) BUSHING ANVIL 조립




39) SPACE FRONT 조립



 40) CAGE HAMMER ASSY 조립



 41) HAMMER CASING 조립




42) 5MM T렌치로 BOLT 조립



DIW-19P_Disassembly



 31) TEST




32)



27)



 28)



29)



30)