



DIW-25HP(1") **DIW-25HPA(3/4")**

 
Maintenance Manual



DIW-25HP/25HPA_Disassembly



1)제품 확인




2)BOLT 분해




3)CASE HAMMER 분해



 4)FRAME HAMMER ASSY 분해



 5)ANVIL 분해




6)HAMMER PIN 분해



DIW-25HP/25HPA_Disassembly



 7)HAMMER 분해




8)CAGE HAMMER ASSY 분해 모습




9)ALLEN HEAD BOLT 분해



 10)REAR COVER 분해



 11)GASKET 분해




12)HOUSING에서 ROTOR ASSY 분해



DIW-25HP/25HPA_Disassembly



 13)FRONT PLATE 분해




14)CYLINDER PIN 분해




15)CYLINDER 분해



 16)BLADE 분해



 17)ROTOR와 REAR PLATE 분해




18)REAR PLATE BEARING 분해




DIW-25HP/25HPA_Disassembly



 
19)FRONT PLATE BEARING 분해



 
20)전체 분해 모습




21)ROTOR와 REAR PLATE 조립

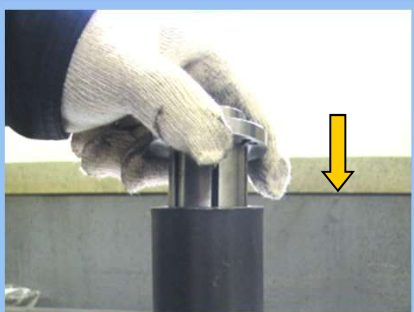

 22)ROTOR 간격 조정



 23)BLADE 조립




24)CYLINDER 조립



DIW-25HP/25HPA_Disassembly



 
25)FRONT PLATE BEARING 조립




26)FRONT PLATE 조립




27)HOUSING에 ROTOR ASSY 조립

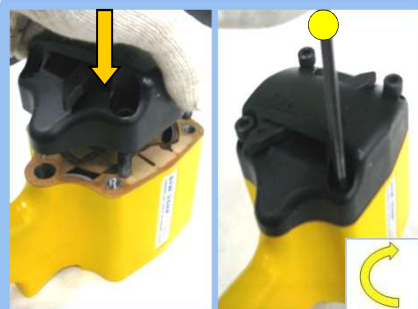

 28)REAR COVER 조립



 29)HAMMER 조립




30)HAMMER PIN 조립



DIW-25HP/25HPA_Disassembly



 31)ANVIL에 구리스 도포




32)ANVIL 조립




33)FRAME HAMMER ASSY 조립



 34)CASE HAMMER 조립



 35)ALLEN HEAD BOLT 조립



36)TEST