



DIW-5P

Maintenance Manual



 
YANGSAN MACHINERY



DIW-5P_Disassembly



1)제품 확인




2)HAMMER CASING 분해




3)HAMMER CASING 분해 모습



 4)JOINT 분해-1



 5)JOINT 분해-2




6) 4)ROTOR ASSY 분해



DIW-5P_Disassembly



 7)FRONT PLATE 분해




8)CYLINDER 분해




9)BLADE 분해



 10)ROTOR와 REAR PLATE 분해



 11)ANVIL 분해




12)HAMMER PIN 분해



DIW-5P_Disassembly



 13)HAMMER 분해




14)CAM HAMMER 분해




15)전체 분해 모습



 16) ROTOR와 REAR PLATE 조립



 17)BLADE 조립




18)CYLINDER 조립



DIW-5P_Disassembly



 
19)FRONT PLATE 조립




20)HOUSING MOTOR에
ROTOR ASSY 조립




21)JOINT 조립-1

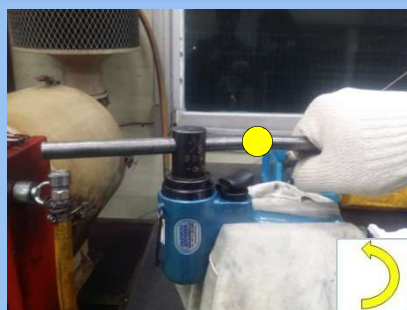

 22)JOINT 조립-2



 23)HAMMER CASING 조립



24)TEST