



DR-8RH

Maintenance Manual




YANGSAN MACHINERY




DR-8RH_Disassembly



1) 제품 확인

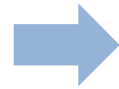


2) SCREW 분해

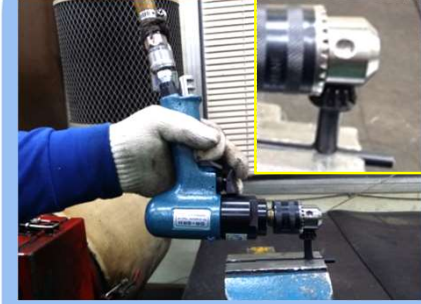

3) DRILL CHUCK 분해-1
(TRIGGER를 눌러 분해)



 4) DRILL CHUCK 분해-2



5) DRILL CHUCK 분해 모습




 
6) CHUCK SPACER 분해



DR-8RH_Disassembly



7)CLAMP NUT 분해

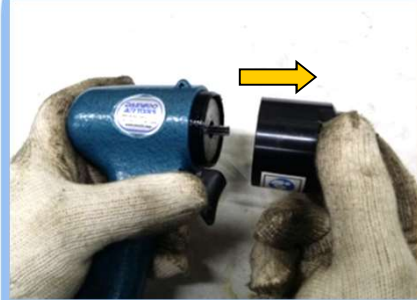

8)CLAMP NUT 분해



9)SPACER 분해



10)PLANET GEAR 분해



11)GEAR CAGE 분해




 
12)BEARING 분해



DR-8RH_Disassembly



13) DRILL CHUCK, GEAR CAGE
분해 모습

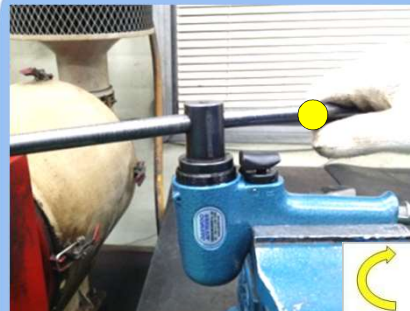


14) JOINT 분해



15) ROTOR ASSY 분해-1



16) ROTOR ASSY 분해-2

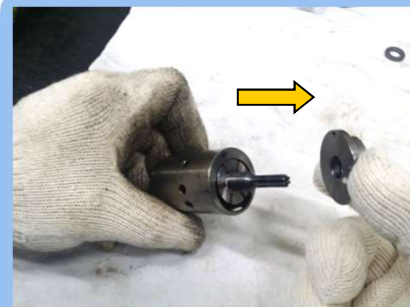

17) FRONT PLATE 분해




18) CYLINDER 분해



DR-8RH_Disassembly



19)BLADE 분해

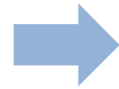



20)ROTOR, REAR PLATE 분해



21)전체 분해 모습



 22)BEARING 조립

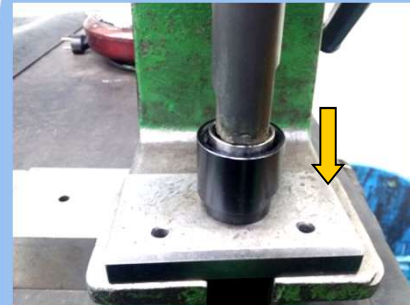

23)INTERNAL GEAR 조립



24)GEAR CAGE 조립



DR-8RH_Disassembly




25) PLANET GEAR 조립



26) REAR PLATE 조립



27) BLADE 조립

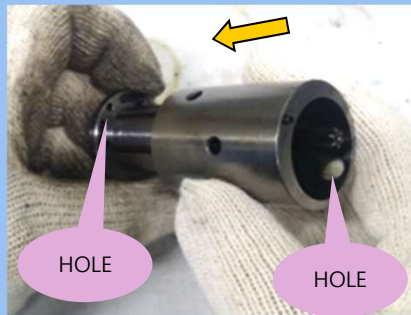

28) CYLINDER 조립




29) FRONT 조립




30) ROTOR 조립




DR-8RH_Disassembly

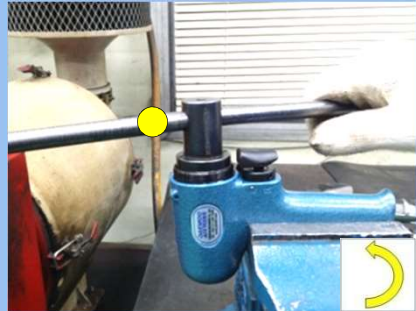

 31)JOINT 조립



32)SPACER 조립

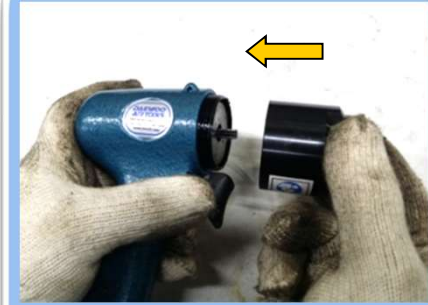

33)CLAMP NUT 조립-1



34)CLAMP NUT 조립-2




35)CHUCK SPACER 조립




36)DRILL CHUCK 조립-1



DR-8RH_Disassembly

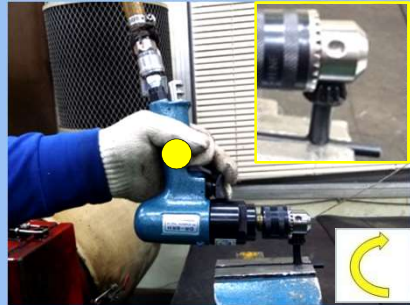

 37)DRILL CHUCK 조립-2



38)SCREW 조립



39)TEST